


# WINDOW MEASURING GUIDE

Window coverings may be mounted inside (IM) or outside (OM) the window casing, measure carefully using a steel tape.

Allowances for clearances are made by the vendor or factory. Outside measures A & B should equal OM measures by individual portions.

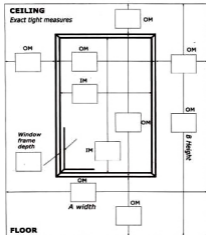

**HOME-tex** fashions Inc.

580 Rosberry Street, Winnipeg, Manitoba, Canada R3H 0T1